





































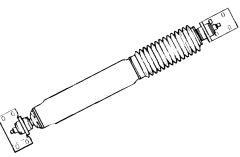


Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
i	mm						
			comfort	sport	comfort	sport	
	0-30			58460		57530	
	50-80		58950	57070		57790	59890
	90-120		58470	58100			58720
	200			58760			58720

Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato										
i	mm	TÜV								
1973-1976	+100	D	---	S07419		2	58470		2	58720
						2	77023		1	17837
1976-1991	+100	D	---	S07429		2	58470		2	58720
						2	77023		1	17838
1976-1991	+100	A	---	S07449		2	58470		2	58720
						2	77023		2	77148
									1	17870
1976-1991	+200	A	---	S07819		2	58760		2	58720
						2	77046		2	77146
									1	17867

Büchsenätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
i					
1973-1991					13790
1976-1991 (+200)					13645

Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti					
i					mm
1973-1976		15795		15869	
1976-1991		15649		15869	 OE/+100
				15796	 +100

Blattfedern • leaf springs • ressorts á lames • Ballestas • Balestre					
i			mm		
					mm
1973-1991		77023	+100		
1977-1991				77148	+100
1977-1991		77046	+200	77146	+200

Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
i					
		66032		66110	66220
					SA40

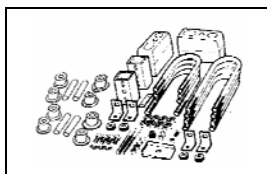
Chevrolet / GMC

Blazer, Jimmy, Suburban, 1/2 ton 1973 - 1991





trail master®

a **Maas** group company

02.2009



Montagesatz • mounting kit • ensemble pièces de montage • kit de componentes de montaje • kit di montaggio

				mm
		16820		---
			16814	+100