






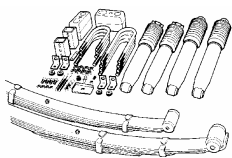





































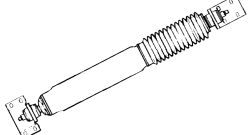







	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-40			58460		57530	
	50-80		58950	57070		57790	59890	
	90-120		58470	58100			58720	

	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato										
		mm	TÜV								
	1973-1976	+100	D	---	S07419		2	58470		2	58720
							2	77023		2	17837
1976-1987	+100	D	---	S07429		2	58470		2	58720	
						2	77023		2	17838	
1976-1987	+100	A	---	S07449		2	58470		2	58720	
						2	77023		2	77148	
									1	17870	
1976-1987	+200	A	---	S07819		2	58760		2	58720	
						2	77046		2	77146	
									1	17867	

	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
						
	1973-1991				13790	
	1976-1991 (+200)					13645

	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti				
				mm	
	1973-1976	15795	15869		
	1976-1991	15649	15869		OE/+100
		15796		+100	

	Blattfedern • leaf springs • ressorts à lames • Ballestas • Balestre				
			mm		mm
	1973-1991	77023	+100		
	1977-1991			77148	+100
1977-1991	77046	+200	77146	+200	

	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
						
		66032			66110	66220
						SA40

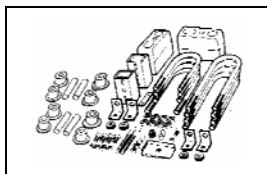
Chevrolet / GMC

Pickup K10 (1/2 ton) 1973 - 1987





trail master®

a **Maas** group company

09.2009



Montagesatz • mounting kit • ensemble pièces de montage • kit de componentes de montaje • kit di montaggio

				mm
		16820		---
			16814	+100