





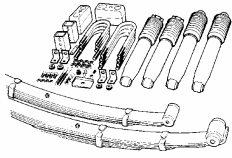











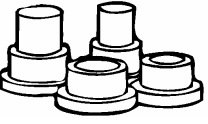






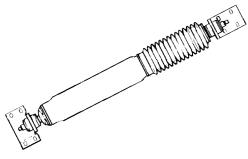


	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori						
	i	mm					
			comfort	sport	comfort	sport	
		0-40		58460		57530	
		50-80		58950	57070		59890
		90-120		58470	58100		58720

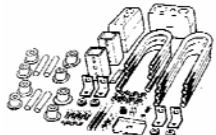

	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevación de suspensión • Asseto Rialzato									
	i	mm	TÜV							
	+100	A	---	S07459		2	58740		2	58720
						2	77023		2	77149
									1	17871
	+200	A	---	S07829		2	58760		2	58720
						2	77046		2	77147
									1	17868

	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
	i					
	+100 mm			13790		

	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti			
	i			mm
		15649		15869
				15840
				+200

	Blattfedern • leaf springs • ressorts á lames • Ballestas • Balestre				
	i			mm	mm
		77023	+100	77149	+100
		77046	+200	77147	+200

	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo				
	i				
	w/ OE	66032		66220	SA40
	w/o OE		66110	66208	SA40

	Montagesatz • mounting kit • ensemble pièces de montage • kit de componentes de montaje • kit di montaggio				
	i			mm	
		16820		---	