

















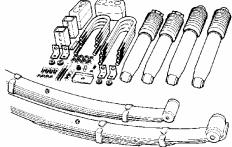





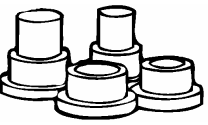



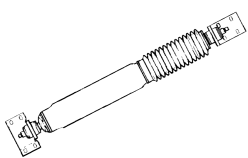






	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
	i	mm						
			comfort	sport	comfort	sport		
			0-40			58460	57600	59260
50-80		58950	57070		57800			
90-100		58470	58100		57800			




	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
	i	mm	TÜV							
						2	58470		2	57800
+100	D	---	S07439	 <td>2</td> <td>77023</td> <td> <td>1</td> <td>17792</td> </td>	2	77023	 <td>1</td> <td>17792</td>	1	17792	

	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre						
	i						
							13790

	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti			
	i			mm
		15813	15794	

	Blattfedern • leaf springs • ressorts á lames • Ballestas • Balestre			
	i			mm
		77023	+100	

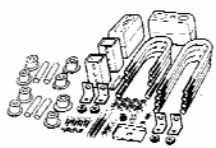	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo				
	i				
					
					16821

	Montagesatz • mounting kit • ensemble pièces de montage • kit de componentes de montaje • kit di montaggio				
	i				
		16821	16820	16814	mm
					+100