




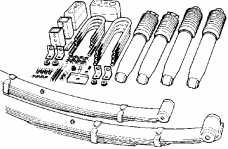






















	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-30			59650		56880	58870
		40-60			57700		58450	

	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato										
		mm	TÜV								
		+50	D	o.k.	S27219		2	57700		2	58450
							1	16735		2	77106

	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
						
				13653		

	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti				
					mm
				15817	

	Blattfedern • leaf springs • ressorts à lames • Ballestas • Balestre					
				mm		mm
					77106	+50