






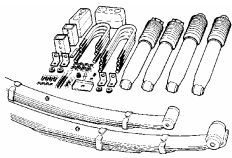





























	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
1979-1983		0-40			57690		59390	58920
		50-85			59710			58450
1984-1997		0-40			57690		58530	59610
		50-85			59710			58740

	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato										
		mm	TÜV								
1979-1983		+85	C	---	S03329		2	59710		2	58450
							r. 1	77652		1	31522
								l. 1	77052		1
1984-1997		+85	C	---	S03339		2	59710		2	58740
							r. 1	77652		1	31522
								l. 1	77052		1

	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre						
							
		13658		13639		13640	13640

	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti			
				mm
		15832	15832	

	Blattfedern • leaf springs • ressorts à lames • Ballestas • Balestre				
			mm		mm
		77652 r	+85		
		77052 l	+85		