




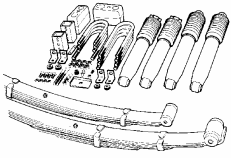





























	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-30		59540				59560
		50-80		58690	59790		59380	59740








	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
				S46319		2	58690		2	59380
		+70	A	---		2	77008		2	77108
									1	17777

	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
						
		13816	13816			

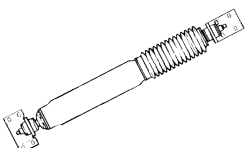	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti			
				mm
		15847	15848	

	Blattfedern • leaf springs • ressorts à lames • Ballestas • Balestre				
			mm		mm
		77008	+70	77108	+70

	leaf kit • leaf kit • kit lames additionnelles • kit de hoja adicional de ballestas • kit foglio balestre							
								
		kg	#	#				
		+150		77008		31534		

	Lenkungsämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
						
		66130				