


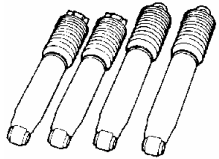


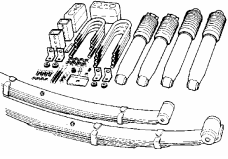









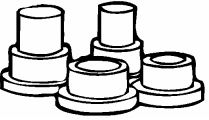














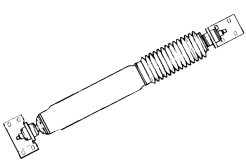








|  | Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori | | | | | | | |
|---|---|---|--|--|-------|---|---------|-------|
| |  | mm | |  | |  | | |
| | | | | comfort | sport | | comfort | sport |
| | | 0-40 | | | 58380 | 58410 | | 58790 |
| | 50-80 |  | | 58900 | 58600 |  | 58890 | 58860 |














|  | Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato | | | | | | | | | | | |
|---|---|-----|-----|---|---|---|--|-------|---|---|-------|-------|
| |  | mm | TÜV |  |  |  | | | | | | |
| | Softtop | +60 | A | o.k. | S06229 |  | 2 | 58600 |  | 2 | 58890 | |
| | | | | | | |  | 2 | 77013 |  | r. | 1 |
| | | | | | | | 1 | 17781 |  | l. | 1 | 77113 |

|  | Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre | | | | | | |
|---|---|---|-------|---|--|--|--|
| |  |  | |  | |  | |
| | tm springs | 13816 | 13816 | | | | |
| | | | | | | | |

|  | Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti | | | | |
|---|---|---|-------|---|----|
| |  |  | |  | |
| | | 15835 | 15836 | | mm |
| | | | | | |

|  | Blattfedern • leaf springs • ressorts á lames • Ballestas • Balestre | | | | |
|---|---|---|-----|---|-----|
| |  |  | mm |  | mm |
| | | 77013 | +60 | 77113 l | +60 |
| | | | | 77613 r | +60 |

|  | Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo | | | | | |
|---|---|---|---|---|---|---|
| |  |  | |  | | |
| | |  |  |  |  |  |
| | | | | 66160 | | |

|  | leaf kit • leaf kit • kit lames additionnelles • kit de hoja adicional de ballestas • kit foglio balestre | | | | | | | | | |
|---|---|---|---|---------|---|---|---|---------|---|-------|
| |  | kg |  | | |  | | | | |
| | | |  | # |  | |  | # |  | |
| | Hardtop | OE | | | |  | 77113 | 06/2008 | | |
| | | | | |  | 77613 | 06/2008 | | | |
| Softtop | +150 | | | |  | 77113 | 06/2008 | | | 31531 |
| | | | | |  | 77113 | 06/2008 | | | |
| | +150 |  | 77013 | 06/2008 | 31531 | | | | | |