




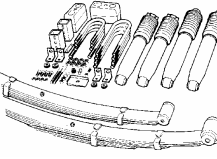

























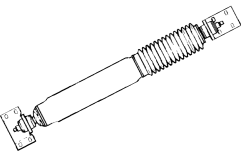




	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
	10/1985 -	0-40		59760	59800		59300	
	10/1985 -	50-80		58690	59770		58530	59610

	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato										
		mm		TÜV							
					S12329		2	58690		2	58530
		+75	A	o.k.		 <td>r. 1</td> <td>77605</td> <td> <td>2</td> <td>77105</td> </td>	r. 1	77605	 <td>2</td> <td>77105</td>	2	77105
						 <td>l. 1</td> <td>77005</td> <td></td> <td></td> <td>17777</td>	l. 1	77005			17777

	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
						
		13816	13816			

	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti				
					mm
		15847	15848		

	Blattfedern • leaf springs • ressorts à lames • Ballestas • Balestre				
			mm		mm
		77005	+75	77105	+75
		77605	+75		

	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo				
					
		66130			