




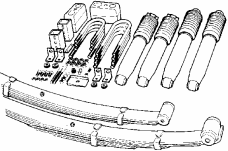




































	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-40		59540				59560
		50-70		58690	59790		59380	59740

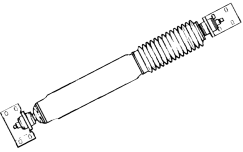






	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
70-73 only	+60	A	---	S46319	 2	58690	 2	59380	 2	77108
					 2	77008	 2	77108	 1	17777

	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
						
		13816	13816			

	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti			
				mm
		15847	15848	

	Blattfedern • leaf springs • ressorts à lames • Ballestas • Balestre				
			mm		mm
		77008	+60	77108	+60

	leaf kit • leaf kit • kit lames additionnelles • kit de hoja adicional de ballestas • kit foglio balestre								
		kg							
					#			#	
		+150		77008		31534			
70-73		+100					77108	31531	
75		OE					77108	31531	

	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
						
		66130				